


部屋外側

TW=(取付間口幅 内~内寸法)

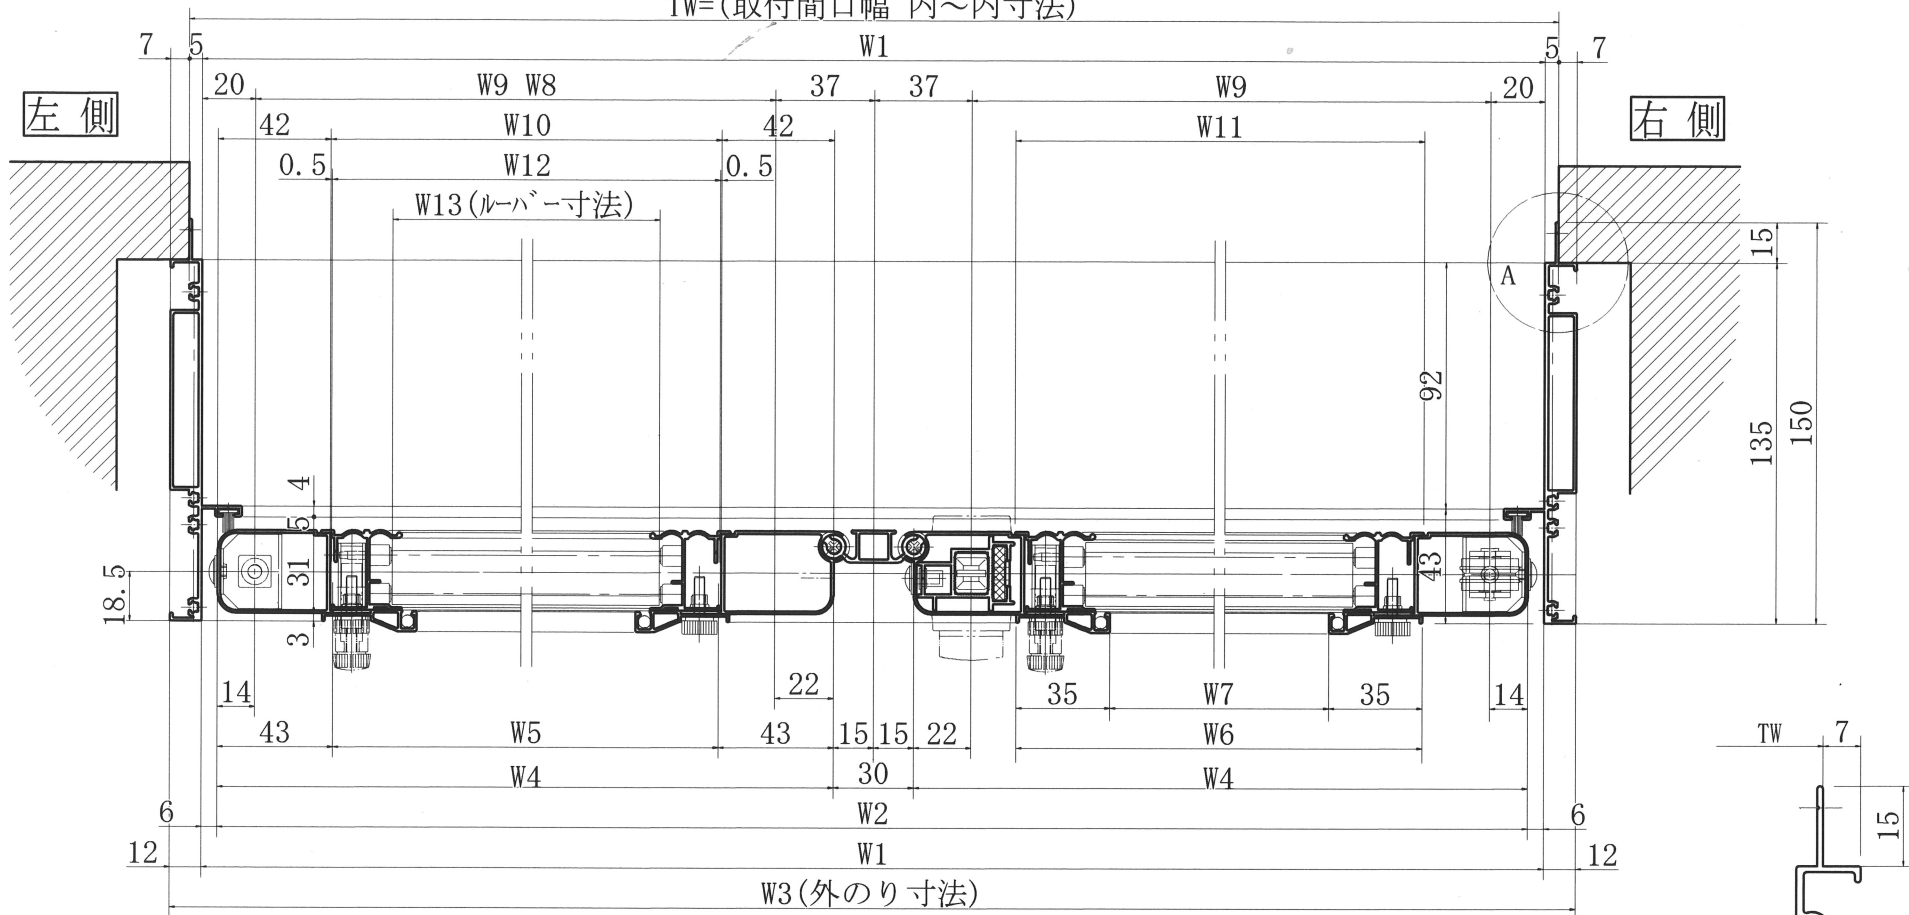

部屋内側

A部詳細 (1:1)

TW	W1	W2	W3	W4	W5	W6	W7	W8	W9	W10	W11	W12	W13
800	790	778	814	374	288	296	226	375	338	290	297	289	244
850	840	828	864	399	313	321	251	400	363	315	322	314	269
公式	TW-10	TW-22	TW+14	$\frac{TW}{2}-26$	$\frac{TW}{2}-112$	$\frac{TW}{2}-104$	$\frac{TW}{2}-174$	$\frac{TW}{2}-25$	$\frac{TW}{2}-62$	$\frac{TW}{2}-110$	$\frac{TW}{2}-103$	$\frac{TW}{2}-111$	$\frac{TW}{2}-156$

HEAT TREATMENT		SURFACE FINISHING		PART NAME Nice Wind's Door オーダー用(135)横断面納まり図	
SCALE 0:0 1:2 Free		MATERIAL		PART NUMBER TR4-P06	
DRAIN BY		DESIGNED BY YAMACHAN 23, 10, 29		CHECKED BY	
		APPROVED BY		I Z K - 3 3 0 0 S A	
				株式会社 オーバル	

